
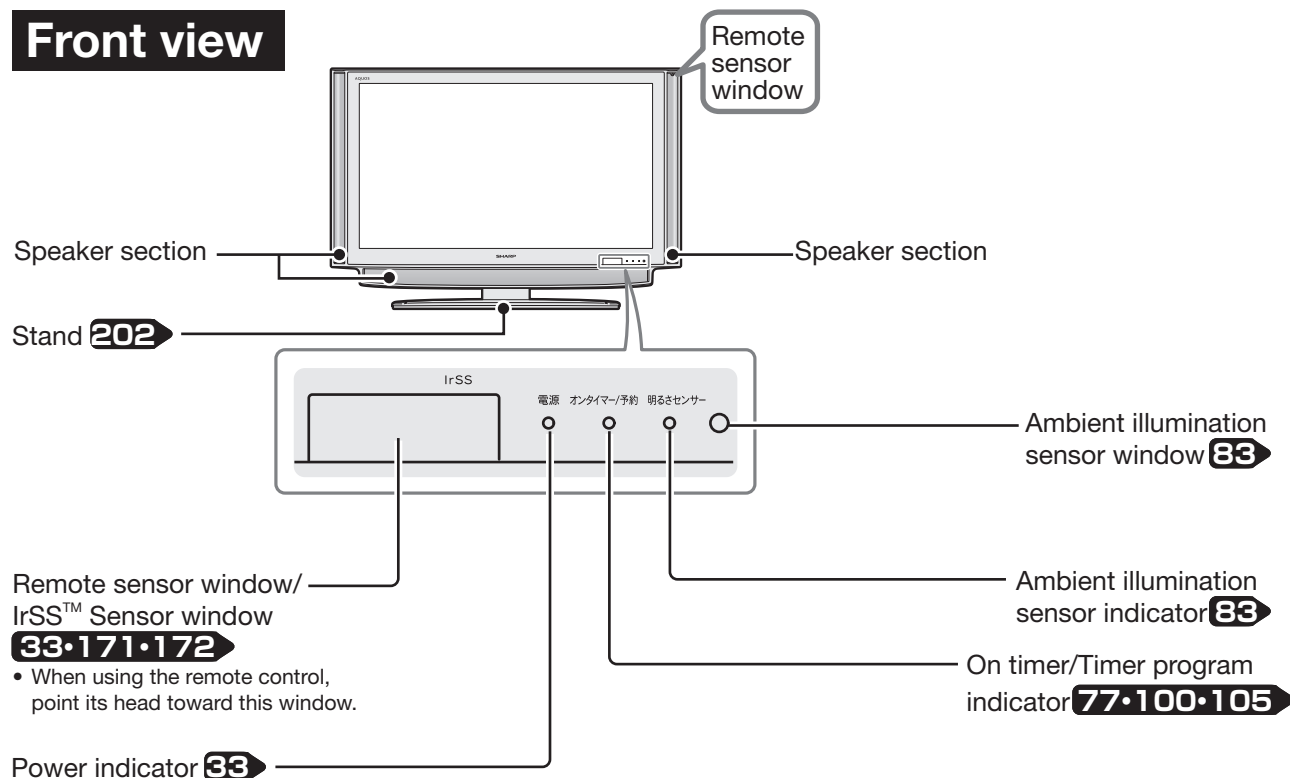
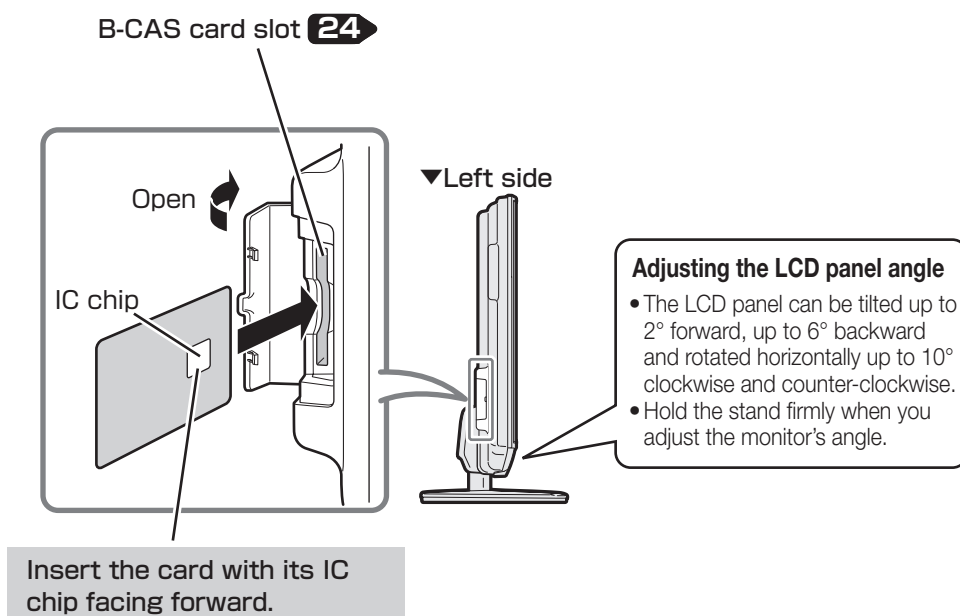


- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

## Front view



## Side view



## Back view

i.LINK (TS) jack

**118**

LAN jack  
(10BASE-T/100BASE-TX)

**153**

Connect a PC with the  
DVI terminal, etc.

AV in 7 (DVI-I, Audio)

**132・139**

Center speaker jack

**138**

VHF-UHF antenna  
input terminal **26~29**

BS-CS 110 antenna  
input terminal **27~29**

AV in 4 **91**

Connect a recorder

Monitor out (REC OUT)/  
AV in 6

**91・97・102**

Connect a Blu-ray  
Disc player,  
AV amplifier, etc.

AV in 1 and 2 (HDMI)

**91・92・109・110**

RS-232C **142**

Digital audio output  
jack (optical) **110・136**

AV in 6 **91**

Connect the telephone line

Telephone line jack **147・153**

Main power  
switch **33**

Menu  
button **34**

Input / TV select  
(Enter) button  
**34・93**

Channel up (Λ) /  
down (V) buttons

Volume up (+) /  
down (-) buttons

Connect a video game  
equipment, video camera, etc.

AV in 5 **91**

Connect a video game  
equipment, video camera, etc.

AV in 3 (HDMI)  
**91・92・109・110**

Headphones jack  
**19・86**

AC cord connector  
(AC 100V) **31**

Connect the AC cord

# Part Names – Remote Control Unit

## Active/Standby **33**

Press to engage the TV set in the active or standby mode.

CATV

## CATV **63**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

3桁入力

## Digital channel number input **63**

Use to select a digital channel by entering the 3-digit channel number.

## 地上A Terrestrial analog select **60**

## 地上D Terrestrial digital select **60**

## BS BS select **60**

## CS CS select **60**

Select the CS digital channel for the first time. **39**

## 消音 Mute **61**

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

## + 音量 (+)/down (-) **61**

Press to adjust the volume.

## Linked data broadcast **76**

Press to call the data broadcast linked with the current digital TV program.

## AV mode select **81**

Press to select the picture/sound setting that best matches the current program.

## 番組表 EPG **66・68**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## 裏番組 Other on-air programs **67**

Press to display the EPG for currently on-air programs only (裏番組).

番組情報

## Program info **76**

Press to display detailed information on the current digital program.

## Finish **34**

Press to finish menu operation, etc.

\* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

お好み選局

## Favorite channel select/register **63**

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

映像切換

## Picture select **73**

Press to select the desired picture when watching a digital multi-picture program.

字幕

## Caption **73**

Press to display, select, or turn off captions when watching a digital program with captions.

音声切換

## Audio select **72・73**

Press to select the desired audio.

## Familink **112・114~117**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

画面表示

## Display **62**

Press to display or turn off the channel call, etc.

画面サイズ

## Screen mode **79・133**

Press to select the desired screen mode.

AQUOS.jp

## AQUOS.jp **156**

Press to connect to the internet.

i.LINK

## i.LINK **120**

Press to display the i.LINK control panel.

## Channel select **61**

- Press to select a channel.
- Use to input a number for various settings.

選局

## Channel up (^)/down (v) **61**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped.

入力切換

## Input select **93**

Press to select the desired input.

## Media select **60**

Press to select the desired media (TV or data).

## Sleep timer **178**

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

## Menu **34**

Press to display or turn off the menu screen.

*The menus can be displayed in English. See **213** for instructions on how to switch the display language.*

## Cursor (up, down, left, right) **34**

Use to select a menu item, column, etc.

## 決定 Enter/Confirm **34**

Press to confirm a selected setting or menu item.

## Return **34**

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

青 赤 緑 黄

## Color **68・69・76**

Use to operate EPGs and data program screens.

静止

## Freeze **75**

Press to freeze the picture.

2画面

## Split screen **74**

Press to switch between the split screen mode and the normal screen mode.


操作切換

## Operable screen **74**

Press to switch the operable screen when the TV set is in the split screen mode.

## To open the cover

Hold the cover by the projections on both sides and lift upwards.

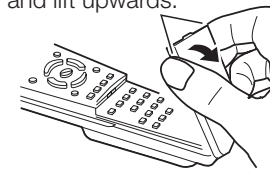

# Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



誤ってメニューを英語にしてしまったときは

- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。


- Press** **メニュー** Display the menu screen.  
メニューを表示する
- Select “本体設定”(Setup)－“Language (言語設定)”.  
「本体設定」－「Language (言語設定)」を選ぶ  
**決定** Enter.  
決定する

本体設定 ... Language(言語設定)

音声調整 省エネ設定 **本体設定** 機能切換

かんたん初期設定  
地域設定  
チャンネル設定  
アンテナ設定  
スピーカー設定  
入力スキップ設定  
位置調整  
① オートワイド  
映像反転 [しない]  
クイック起動設定 [しない]  
**Language(言語設定) [日本語]**  
時計設定  
リモコン番号設定 [リモコン番号1]  
個人情報初期化

- Select “English”.  
「English」を選ぶ  
**決定** Enter.  
決定する

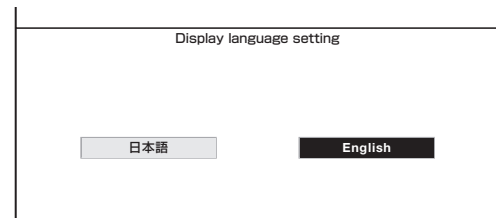

- The menu screen is now displayed in English.
- 画面表示が英語になります。

- 終了** Finish this operation.  
終了する

はじめに

準備

番組を見る

他の機器で  
録画・再生

ファミリンク  
で録画・再生

本機の機能の  
活用

インターネット  
を楽しむ

写真の表示と  
印刷

故障かな・仕様・  
寸法図など

English  
Guide